


TP-1000 CONNECTIONS - 232


P.C. RS232 to terminal using standard data cable

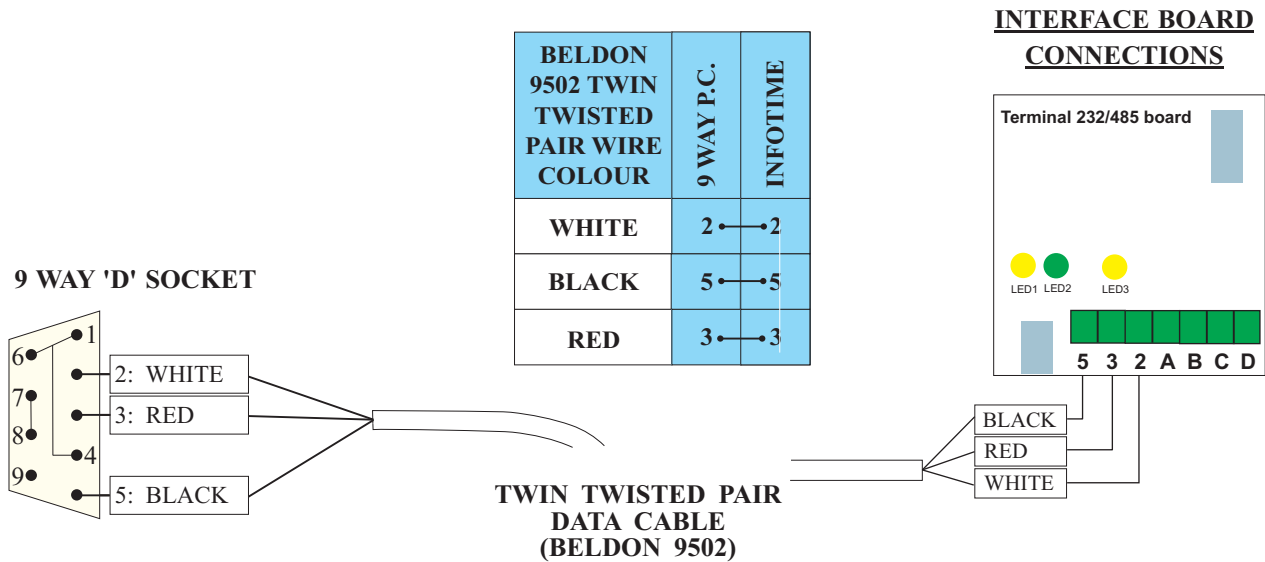

INSTALLATION NOTES

1. Other cable may be used but we recommend *BELDON 9502* as this is the Industry standard. When using twin twisted pair, be sure to use the same black wire at both ends of the cable.
2. If using a 9 Way Connector at the PC, ensure pins 1, 4 & 6 are linked together & separately 7 & 8.
3. When wired correctly with the Computer and Control Box both switched on, LED's L1 and L2 will be lit on the Interface board. Green = Control Box OK, Yellow = P.C. OK. If this is not the case please check your connections.

P.C. RS232 to terminal using HGU lead

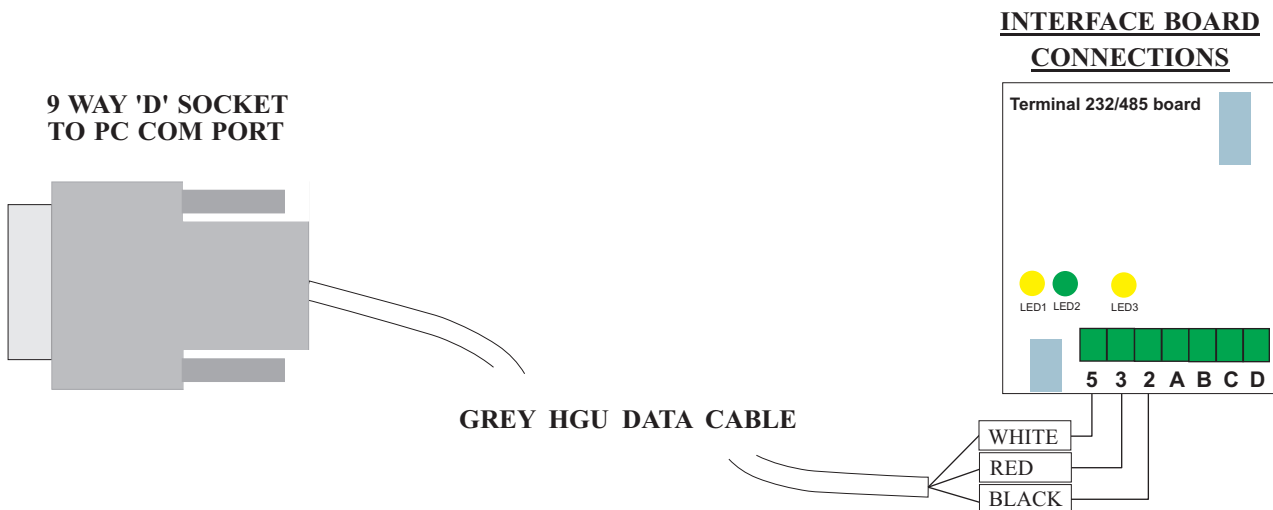

INSTALLATION NOTES

When wired correctly with the Computer and TP-1000 both switched on, LED's L1 and L2 will be lit on the Interface board. Green = TP-1000 OK, Yellow = P.C. OK. If this is not the case please check your connections.