



TP-600 Bell connections

Mains bell with mains supplied from TP600

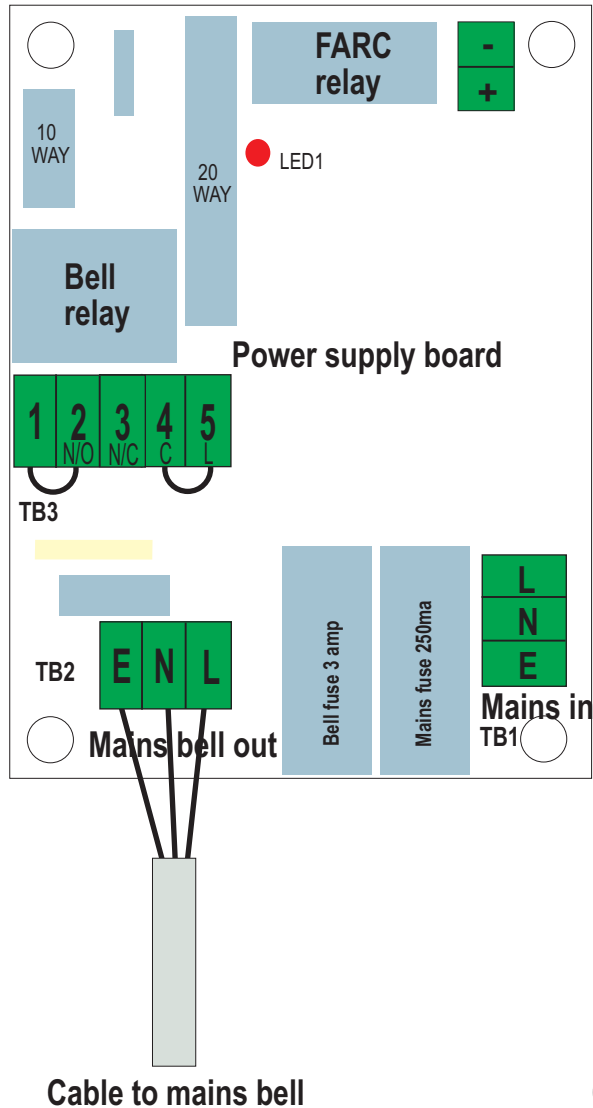

Bell using dry contact switching from relay

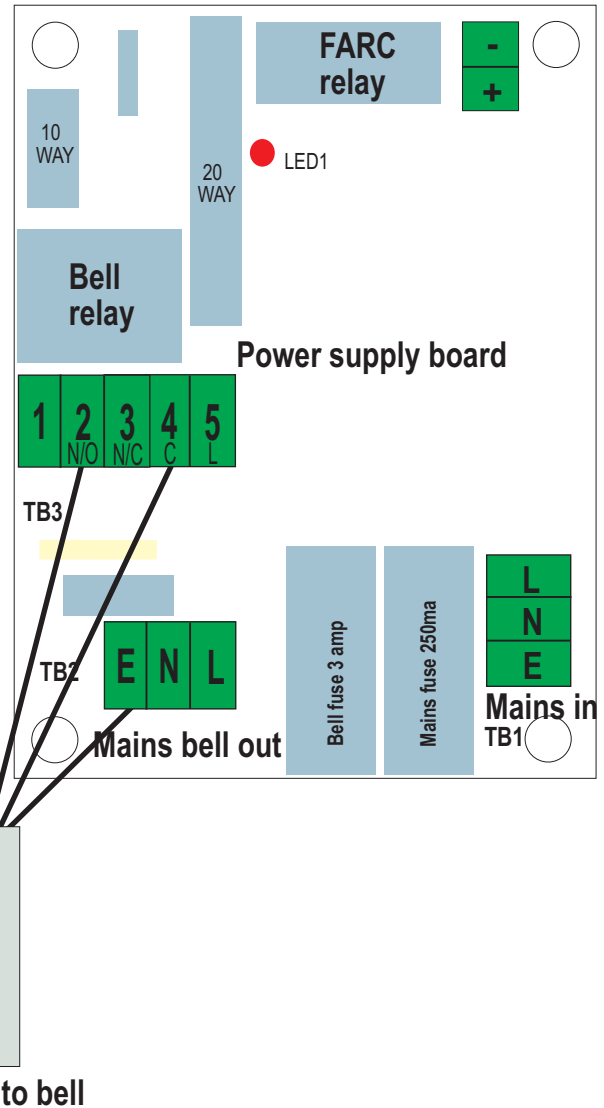

INSTALLATION NOTES

1. For a mains bell powered from the TP600 mains, link TB3 1 to 2 and TB3 4 to 5. Connect the bell lead to TB2 E, N and L.
2. For a bell system that only requires a closed contact, connect the bell lead to TB3 2 and 4, this provides a normally open dry contact. For a normally closed contact connect to TB3 3 and 4. Connect the earth if required.